



Tabla de Cruces Serie 2000 – Roscado.

Tamaño		A	B
pulg.	mm	mm	mm
1/8	3.20	21.00	22.00
1/4	6.40	21.00	22.00
3/8	9.50	25.00	25.00
1/2	12.70	29.00	33.00
3/4	19.00	33.00	38.00
1	25.40	38.00	46.00
1 1/4	31.80	44.00	56.00
1 1/2	38.00	51.00	62.00
2	51.00	60.00	75.00
2 1/2	63.50	76.00	92.00
3	76.00	86.00	110.00
4	102.00	106.00	146.00

Tabla de Cruces Serie 3000 – Roscado y S.W.

Tamaño		A Roscado	B Roscado	A S.W.	B S.W.	C Min.	D Max.	E Max.
pulg.	mm	mm	mm	mm	mm	mm	mm	mm
1/8	3.20	21.00	22.00	22.00	22.00	10.00	10.90	7.60
1/4	6.40	25.00	25.00	22.00	22.00	10.00	14.35	10.00
3/8	9.50	29.00	33.00	25.00	25.00	10.00	17.80	13.30
1/2	12.70	33.00	38.00	27.00	33.00	10.00	21.95	16.60
3/4	19.00	38.00	46.00	34.00	38.00	13.00	27.30	21.70
1	25.40	44.00	56.00	37.00	46.00	13.00	34.05	27.40
1 1/4	31.80	51.00	62.00	42.00	56.00	13.00	42.80	35.80
1 1/2	38.00	60.00	75.00	47.00	62.00	13.00	48.90	41.70
2	51.00	64.00	84.00	56.00	75.00	16.00	61.35	53.50
2 1/2	63.50	83.00	102.00	60.00	92.00	16.00	74.20	64.20
3	76.00	95.00	121.00	76.00	110.00	16.00	90.15	79.50
4	102.00	114.00	152.00	88.00	146.00	19.00	115.80	103.80

Tabla de Cruces Serie 6000 – Roscado y S.W.

Tamaño		A Roscado	B Roscado	A S.W.	B S.W.	C Min.	D Max.	E Max.
pulg.	mm	mm	mm	mm	mm	mm	mm	mm
1/8	3.20	25.00	25.00	22.00	22.00	10.00	10.90	4.80
1/4	6.40	29.00	33.00	27.00	26.00	10.00	14.35	7.10
3/8	9.50	33.00	38.00	27.00	33.00	10.00	17.80	9.90
1/2	12.70	38.00	46.00	31.00	38.00	10.00	21.95	12.50
3/4	19.00	44.00	56.00	37.00	46.00	13.00	27.30	16.30
1	25.40	51.00	62.00	42.00	56.00	13.00	34.05	21.50
1 1/4	31.80	60.00	75.00	47.00	62.00	13.00	42.80	30.20
1 1/2	38.00	64.00	84.00	53.00	75.00	13.00	48.90	34.70
2	51.00	83.00	102.00	59.00	84.00	16.00	61.35	43.60
2 1/2	63.50	95.00	121.00		102.00	16.00	74.20	
3	76.00	106.00	146.00		121.00	16.00	90.15	
4	102.00	114.00	152.00		152.00	19.00	115.80	